


EASYBOOT CLOUD SIZE CHART IN INCHES

SIZE	W"	L"
00	3 1/2" - 3 7/8"	4 - 4 3/8"
0	3 7/8" - 4 1/4"	4 3/8" - 4 5/8"
1	4 1/4" - 4 7/8"	4 5/8" - 5 1/8"
2	4 7/8" - 5 1/4"	5 1/8" - 5 3/8"
3	5 1/4" - 5 7/8"	5 3/8" - 5 7/8"
4	5 7/8" - 6 1/4"	5 7/8" - 6 1/4"
5	6 1/4" - 6 11/16"	6 1/4" - 6 11/16"
6	6 11/16" - 6 15/16"	6 11/16" - 6 15/16"
7	6 15/16" - 7 3/8"	6 15/16" - 7 3/8"
8	7 3/8" - 7 1/2"	7 3/8" - 7 7/8"

EASYBOOT CLOUD SIZE CHART IN MM

SIZE	W (mm)	L (mm)
00	89-98mm	101-111mm
0	98-108mm	111-117mm
1	108-124mm	117-130mm
2	124-133mm	130-136mm
3	133-149mm	137-150mm
4	149-159mm	150-159mm
5	159-170mm	159-170mm
6	170-177mm	170-177mm
7	177-188mm	177-188mm
8	188-191mm	188-201mm

Important instructions for measuring for EasyCare® products:

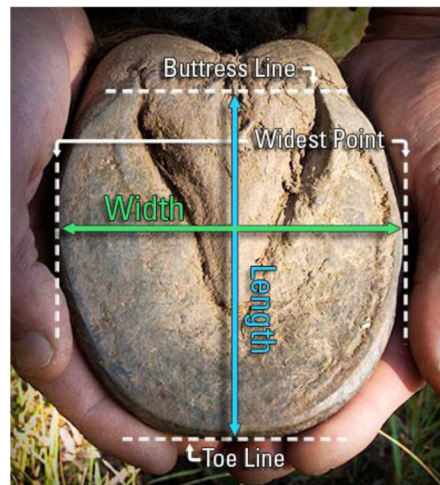

1. After a fresh trim, measure the width of the hoof across the bottom at the widest point.
2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.
3. Compare your measurement with the appropriate size chart. Please note that each boot style has its own unique size chart.
4. Ideally, the length and width measurement will fit into the same size. If the length and width measurements indicate different sizes, select the larger size. If the width and length measurements are different by more than one size, your selected boot style is not recommended.* Be sure to check your measurements against an alternative boot in the EasyCare® line - another style may accommodate your horse's hoof shape better.

***Note: If you are fitting an Easyboot® Glue-On, width and length must fall into the same size category.**