


EASYBOOT GLUE-ON SIZE CHART

SIZE	W (mm)	L (mm)
00	96-99mm	106-109mm
00.5	100-103mm	110-113mm
0	104-107mm	114-117mm
0.5	108-111mm	118-121mm
1	112-115mm	122-125mm
1.5	116-119mm	126-129mm
2	120-123mm	130-133mm
2.5	124-127mm	134-137mm
3	128-131mm	138-141mm
3.5	132-135mm	142-145mm
4	136-139mm	146-149mm
4.5	140-143mm	150-153mm
5	144-147mm	154-157mm

Important instructions for measuring for EasyCare® products:

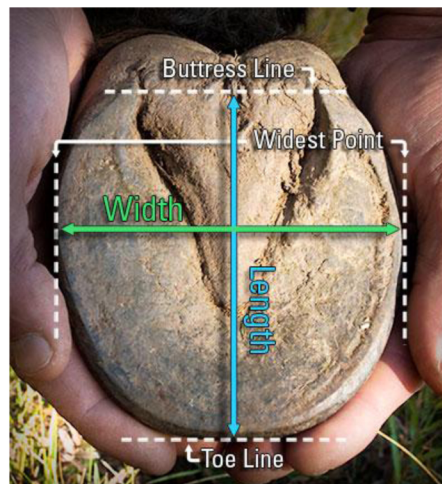

1. After a fresh trim, measure the width of the hoof across the bottom at the widest point.
2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.
3. Compare your measurement with the appropriate size chart. Please note that each boot style has its own unique size chart.
4. Ideally, the length and width measurement will fit into the same size. If the length and width measurements indicate different sizes, select the larger size. If the width and length measurements are different by more than one size, your selected boot style is not recommended.* Be sure to check your measurements against an alternative boot in the EasyCare® line - another style may accommodate your horse's hoof shape better.

***Note: If you are fitting an Easyboot® Glue-On, width and length must fall into the same size category.**