


HOW TO MEASURE FOR THE EASYSHOE FLEX

1. After a fresh trim, measure the width of the hoof across the sole at the widest point.
2. Measure the length of the hoof from the toe to the buttress line of the heel. The buttress line is the farthest weight bearing point of the heel where the hoof wall ends. Do not include the heel bulbs in the measurement.
3. Compare your measurement with the size chart below.
4. Ideally, the length and width measurement will fit into the same size. If the length and width measurements indicate different sizes, select the larger size.

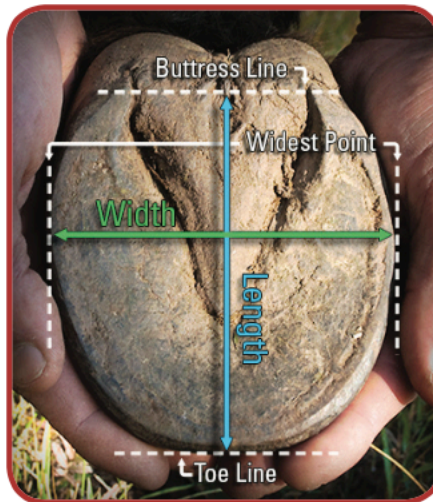

| Size | Width in mm | Max Length in mm |
|------|-------------|------------------|
| 0 | 100-113mm | 118mm |
| 1 | 106-121mm | 126mm |
| 2 | 110-129mm | 134mm |
| 3 | 116-137mm | 142mm |
| 4 | 122-143mm | 148mm |
| 5 | 124-148mm | 154mm |